

# JAC Cassette Air Deflector Ref: DF1a Installation Details

**General:** The deflector which is made from strong lightweight glass fibre is secured to the cassette using:

**1. Metal H Frame**


**2. 4 Nylon Wing Nuts**

Commence by removing the return air grille(c/w filter and security strap) from the cassette facia panel.

A) Remove the filter



B) Place the H frame centrally with the studs through the grille (long edge of the H frame parallel to the hinge end).

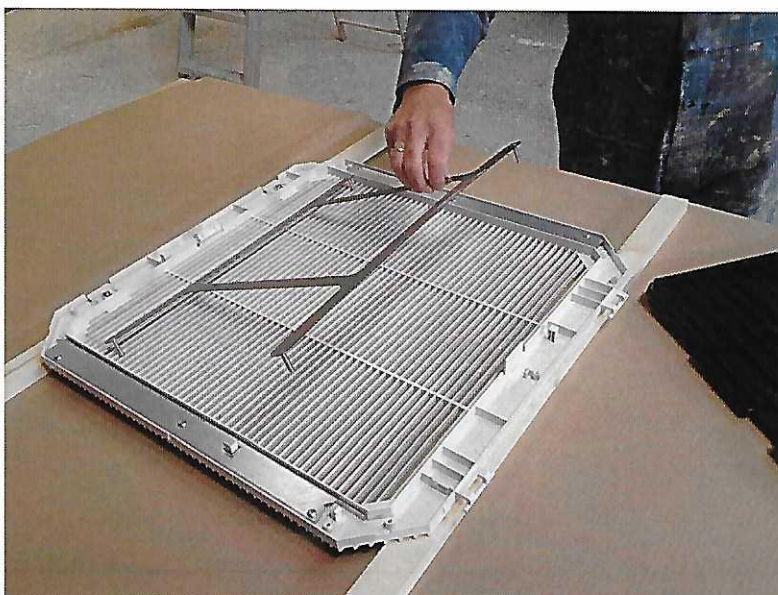

- C) Replace the filter on top of the H frame




**Re-attach the grille to the cassette fascia, make sure to re-connect the manufacturers security strap**

- D) Carefully close the grille making sure the grille catches are fully Inserted into the fascia panel



- E) Loosely fit two nylon wing nuts to one side only and slide the slots on one side of the deflector onto the studs. Holding the deflector with one hand, (on the opposite side to that with the wing nuts on) push up the deflector onto the other studs and attach the two remaining wing nuts.

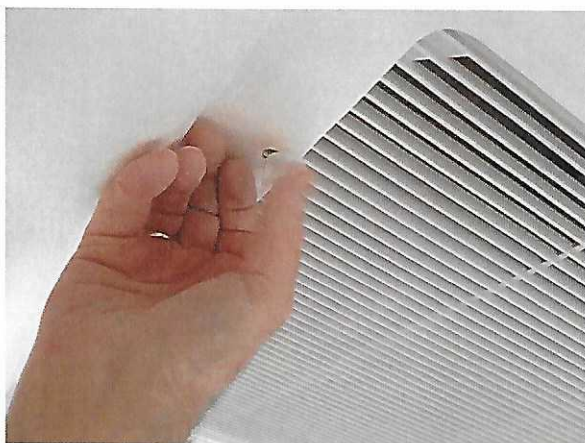

**Check all the wing nuts are hand tight (these will need to be removed when access is required to the filter/fan coil components).**